


①



Check the level of detergent and rinse aid.

②

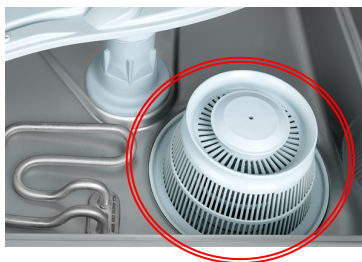

Check that the filter, plug and arms (upper and lower) are installed correctly.



③



Press the button  to start the dishwasher

④




The machine is ready when the preset temperatures are reached. The green arc along with the icon  will illuminate on the screen and a green indicator light will illuminate on the  button.

⑤




Remove any remaining dirt and rinse the items before putting them in the dishwasher.


⑥

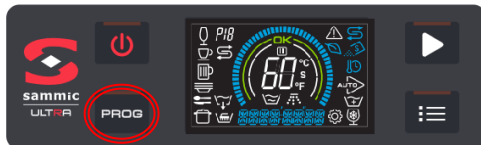

Select the most suitable wash program by pressing the  button.


⑦

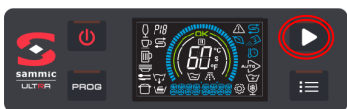

Press the  button to start the wash cycle. The machine will carry out the washing and rinsing processes automatically.

⑧




When the wash cycle is finished, the machine warns: Three "beep" warnings, blue flash of the progress crown, blue flash of the  button and countdown displayed on the screen after zero has been reached.

ULTRA

AFTER USING THE MACHINE




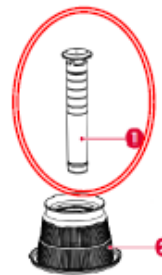


①




Disconnect the overflow.

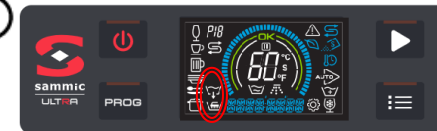②




Open the door, press the PROG button to choose: drain  or self-cleaning and drain  and press .


③

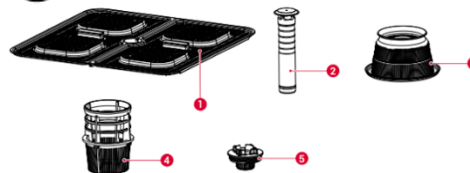

Remove the filters from the tub and wash the internal parts of the machine.

④

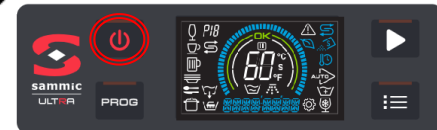

Press the button to  turn off the machine.

HOW TO CLEAN THE WASHING ARMS


Clean the wash arms every day! There are 2 arms: an upper and lower arm.



MACHINES WITH WATER SOFTENER (D and BD)

①



After the pre-set number of cycles depending on water hardness is complete, the display shows the required regeneration warning with the icon .

②



Empty the tank.

③





Empty the tank, open the dishwasher door and fill the salt container with dishwasher salt until the water overflows from the container.

Fill the salt container every 3 regenerations.

*It's recommended to use a funnel to add the salt.


④





With the door open, press the PROG button  until the display shows the "regeneration" icon  » .


⑤



Close the door and press  to begin the regeneration cycle.

- The  icon (white) flashes for the duration of the cycle.
- The  icon (blue) turns off.
- The countdown clock and progress bar indicate the progress of the cycle.

⑥

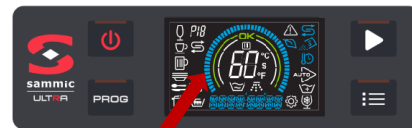

The cycle ends when the blue crown on the display flashes and the countdown has come to an end.

⇒ The machine then shuts off automatically.